

PCMCIA Fingerprint Reader



Hardware Requirements

- INTEL PENTIUM II 300 or higher
- 128MB RAM or higher
- PCMCIA Card port

Software Requirements

- WINDOWS VISTA
- WINDOWS XP
- WINDOWS 2000

Attention:

1. Please decrypt all files before proceed with software un-installation; Files could be decrypted by the registered fingerprints & the corresponding password which did the encryption.
2. Software conflict might occur when the same fingerprint software run on the same computer.

Hardware Installation & Install Driver


1. Switch on laptop.
2. Insert the PCMCIA Fingerprint Reader into PCMCIA slot on your laptop.




3. Laptop will detect the fingerprint reader and show "Find New Hardware Wizard".
4. Select "Cancel" and put the supplied CD into CDROM player.




5. Please go to "My Computer" -> "FP-Reader" -> "Driver" folder & Run "ATMinInst32.exe" in CD.

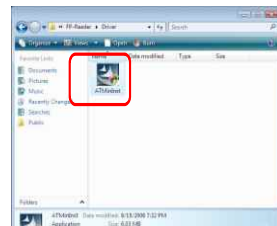

6. Please click on "Next". Then 'Installation of driver has begun'.

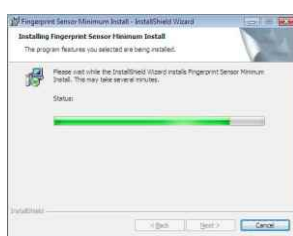


7. Please click on "Finish".

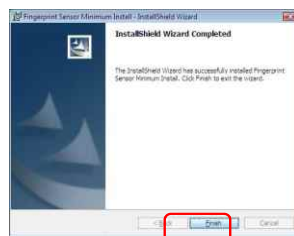


Software Installation

1. Please run "Setup.exe" in CD.

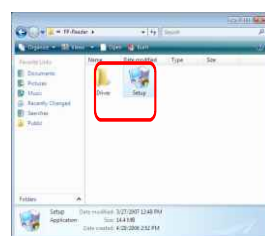

2. Please click on "Run".

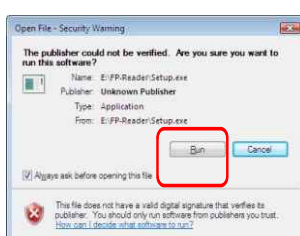


3. Please click on "Run".



4. Please select "I accept the terms in the license agreement" item, and click "Next".



5. Please click on "Next" directly; or select the software installation path, then click "Next".

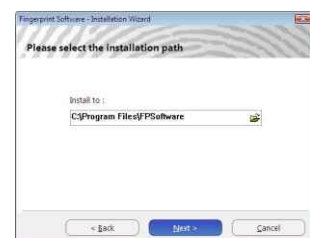



6. Please enter your Windows Logon password & Click "OK". If you would like to logon Windows by fingerprint, but don't have a Windows logon password now, please go to Windows Control Panel and set up your Windows logon password.



Note:
The password can not be blank. As soon as the password is set, it becomes not only the password you login Windows but also the password that could replace fingerprint verification.

How to swipe on fingerprint sensor?

- Place your finger on fingerprint sensor
- Swipe your finger at the same speed.

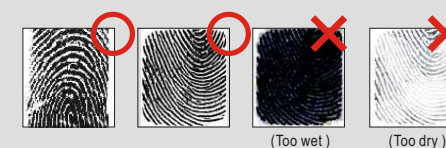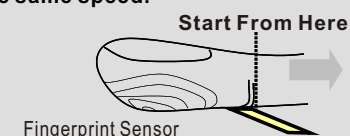

1. Please do not swipe on fingerprint sensor if your fingers are wet. If you find your fingers too dry, please apply some cream to your hands.
2. Please clean sensor area with soft cloth.


Correct input of fingerprint image

Complete fingerprint image




Incorrect input of fingerprint image

Incomplete fingerprint image

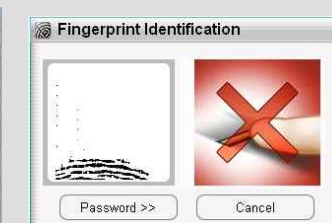


Why Fail?


Incline the finger too much

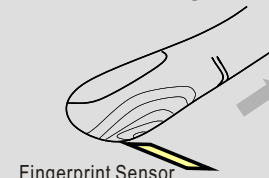

Swipe too fast.

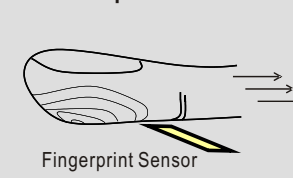


Start from the wrong position....

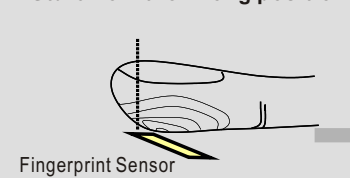

7. You will see fingerprint manager on the screen.



8. Please select a finger and then click "Next".

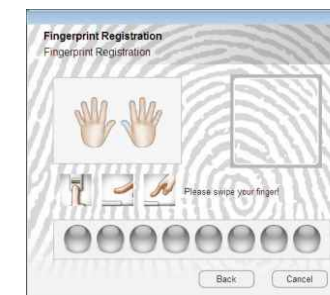

9. Please swipe your finger on the surface of fingerprint sensor.



Fingerprint enrollment complete.

10. Click "Finish". System will ask you for restarting PC. Please click "OK".




We strongly recommend you to enroll at least two fingerprints.

11. If you select enable "Windows logon" function and input your windows logon password also. Please click "OK". System will ask you for restarting PC. Please click "OK".




► Software function brief

1. After restart the computer. Then, you will be asked to input your fingerprint as the dialog window below

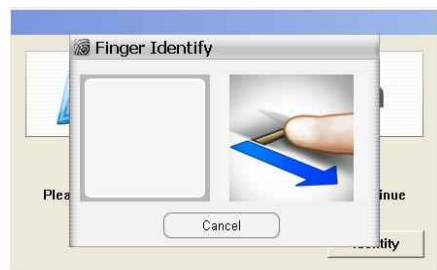

2. If the computer has internet connection at the moment. Please input product serial code which on the CD cover. Then click "Activate" to start.

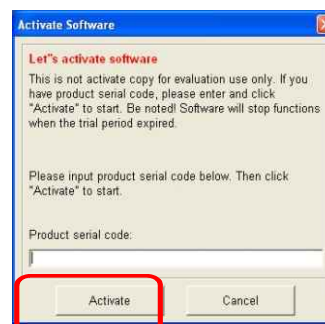

If the computer could not connect to internet at the moment, please click on "Cancel". You will then have a trial software which is valid for 30 days.


Attention

This trial software is with limits and only valid for 30 days. Please complete software registration on line within 30 days, or the trial software will be disabled.

3. After activated the software. You can see the fingerprint manager icon in the corner of icon tray and press left

button on it to activate.

Then, you will be asked to input your fingerprint as the dialog window below

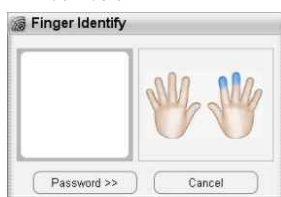

NOTE

You can select "Password" item to enter your password when your fingerprint reader is not available.


Software Menu.
You can still use different function by your need.




Enroll and delete fingerprint

Fingerprint enrolling process; please refer to the description as your first time fingerprint enrolling.

If you want to delete enrolled fingerprint, you can click right button on the fingerprint manager icon in the corner of icon tray. Then, choose the "Fingerprint Registration" item.



Please swipe your fingerprint on fingerprint sensor.

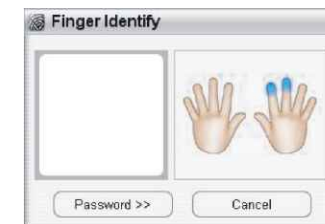

After a few seconds, you will see fingerprint manager on the screen. Click the finger which you want to delete and then you will see "Delete this finger" button on the screen. Please click this button to delete enrolled fingerprint.



NOTE

Please double confirm before you delete the enrolled fingerprint to avoid future failure in system

More detail about software function manual, please refer to the user manual inside of CD-ROM or the "Help" item on the software